



gen^{ie}



GENie EC



GENie QC-1



GENie O3

Calibration Gas Generator Instruction Manual

Software Rev 1.16



Calibration Gas System

Instruction Manual for

GENie QC-1

GENie EC

GENie O3

Software Rev 1.16



Calibration Gas System

Instruction Manual for

GENie QC-1

GENie EC

GENie O3

Software Rev 1.16

Table of Contents

Warning	1
General Description	2
GENie Base Unit	2
Power Source	2
Microprocessor-Based Circuitry	3
Digital Display	3
POWER and SELECT	3
Delivery Hose	3
External Charcoal Filter	3
Mass Flow Sensor	4
System Interface Bus	4
Foreign Language Option	4
GENie QC-1 Module	6
Operation	6
Quick Check Vial (QCV)	6
Menu Options: Foreign Language Option	9
Gas Sources	9
Accessories and Replacement Parts	10
Specifications	10
GENie EC Module	11
Internal Micro Pump	11
Operation	11
Menu Options: Sample Draw Mode	15
Menu Options: Foreign Language Option	16
Gas Sources	17
Accessories and Replacement Parts	18
Specifications	18
Generating Source Removal and Replacement	18
GENie O3 Module	20
Internal Micro Pump	20
Ultraviolet Light Source	20
Operation	20
Accessories	23
Specifications	23
Maintenance	24
Battery Replacement	24
Troubleshooting	26
Accessories	28
Replacement Parts	29
Standard Warranty	30

Warning

This instrument generates calibration gas for toxic gas detectors. The instruction manual should be read and understood before the operation of the instrument. Failure to operate the instrument correctly can lead to improper calibrations.

This instrument conforms to the protection requirements of the EC DIRECTIVE 89/336/EEC on Electromagnetic Compatibility (EMC), in accordance with the provisions of Statutory Instrument 2372.

The following standards have been applied:

EN 50081-1 Emissions Standard (Residential Commercial and Light Industry)

EN 50082-1 Immunity Standard (Residential Commercial and Light Industry)


General Description

The GENie family of instruments consists of the GENie base unit (which provides a microprocessor-based user interface and control system) and a source module (that determines the gas to be generated).

GENie Base Unit and GENie (QC-1, EC or O3) Source Module (front and rearview)

GENie Base Unit

Battery-powered microprocessor-based user interface and control system.

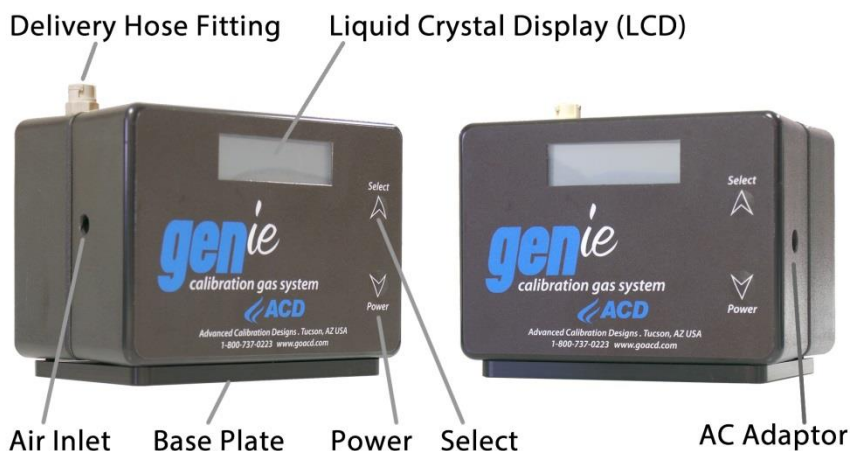

Power Source

A set of four fully charged, heavy-duty alkaline AA batteries provides approximately 6 hours of continuous operation at .5 LPM. Note: Rechargeable or light duty batteries can be used, but they give significantly less operating time.

An optional battery extender is available that utilizes eight AA type batteries and provides extended hours of operation.

Continuous operation power adapters are also available for benchtop operation (note adapters are also available for international customers).

Microprocessor-Based Circuitry

The GENie base unit has microprocessor-based circuitry that performs several different operations and offers the user many different features. The microprocessor tracks source and battery usage, monitors the airflow rate, and controls the source and pump to give the selected ppm and flow rate. In addition to English, every GENie QC-1 can provide menu displays in French, German Spanish, and Portuguese. See section IV. Menu Options for instructions on how to change the menu language.

Digital Display

The GENie base unit has a liquid crystal display (LCD) located on the front of the instrument. This display is protected by a thin, clear plastic cover that is part of the front membrane panel and may be replaced if it becomes scratched or unclear.

POWER and SELECT

The POWER and SELECT switches are momentary push button type switches activated through the front membrane panel. They are physical switches mounted directly on the circuit board.

Delivery Hose

The instrument comes standard with a five (5) foot long, ¼ inch diameter Teflon lined hose for delivering the gas to the sensor or calibration adaptor. The hose has a male quick connect adaptor for easy attachment to the instrument.

External Charcoal Filter

An external charcoal filter is provided to scrub contaminated air. This filter should be replaced yearly at the time of calibration.

Mass Flow Sensor

The GENie main module has a built-in mass flow sensor that measures the flow rate of the instrument. This information is used in two ways. With the pump engaged, it is used to control the pump to the desired flow rate over a range of 0.2 to 1.0 LPM. With the pump disabled, it is used to measure the airflow rate drawn through the GENie by an external pump (for use with EC module only). This information is used to determine the source generation rate to achieve the desired ppm. The flow meter should be calibrated against a primary mass flow standard every 12 months.

System Interface Bus

The center of the GENie system of products is the module expansion bus. This proprietary interface bus is what allows the GENie base unit to interface with an ever-expanding family of product modules. Each source module provides the base unit with information about calibration, the life of the unit, gas type, etc. These contacts must remain clean and undamaged throughout the life of the instrument. If communication **between the modules is ever corrupted, the unit will display the 'source not found' error and turn itself off.**

Foreign Language Option

The menu options can be adjusted to read in German, French, or Spanish. To change the language, start the unit as you normally would. When the GENie screen appears,

GENie [Module Name]

press the SELECT button. This will bring up the following screen (note: the Select button must be pressed quickly before the above screen transitions):

English

Press the SELECT button to choose the preferred language. Each time the select button is pressed the language will continue to scroll through the four possible options. When the language is displayed, press the POWER button to continue with the start-up sequence.

Deutsch

Español

Portuguese

Francais

GENie QC-1 Module

Operation

Quick Check Vial (QCV)

The GENie QC-1 utilizes the ACD Quick Check Vials (QCVs) as a gas source. Before inserting a new vial into the instrument, open the coarse adjust knob approximately three rotations to allow for easier insertion. To begin operation, take one of the QC vials and break the internal glass vial to release the gas. Slide open the GENie base unit and insert the vial into the unit as shown below. The vial should snap into place. Then return the base plate by sliding it back until it 'latches' into place.



To start the instrument, press and hold the POWER switch, located in the lower right of the front of the instrument, until the display reads GENie QC-1, approximately five (5) seconds. Release the switch immediately thereafter.

The instrument will sequence through several screens as follows:

GENie 1.2 QC-1
Copyright 2012

The instrument will display the serial number and source number, followed by the manufactured date. The calibration date is the date the instrument was last calibrated.

Serial# 0000001
Source# 000001

Manufactured
01 Jan 2012

Calibration Date
01 Jan 2012

The display will change to simply display the concentration as shown below.

100 PPM NH3
Select to change

If the instrument is unable to achieve the selected concentration due to insufficient gas concentration, the following screen sequences will display accompanied by an audible beep.

100 PPM NH3
Low PPM warning

100 PPM NH3
Stabilizing

100 PPM NH3
@ .20

If the instrument is unable to achieve the selected concentration due to excessive gas concentration, the following screen sequences are displayed accompanied by an audible double beep.

100 PPM NH3
High PPM warning

275 PPM NH3
Stabilizing

275 PPM NH3
@ 1.10

In the High PPM warning mode, the unit will display the actual concentration rather than the set point so that the operator has an idea of how much adjustment is needed to bring the unit into normal operation.

When the coarse adjust in range the unit will return to displaying the set point concentration.

If the Low PPM warning message is present open the vial adjust slightly by rotating it counterclockwise to allow additional gas to enter the system. If the High PPM warning message is present close the vial adjust knob by rotating it clockwise as shown in the image to the right.



When the instrument has stabilized, the display will change to read the concentration of the gas being generated and the flow rate as shown below.

**100 PPM NH3
@ .50**

The position of the vial adjust is a rough adjustment depending on the concentration you have selected. The instrument will adjust flow to obtain the exact concentration. In general, a more open vial adjust will result in a higher flow rate and a more closed vial adjust will result in a lower flow rate. If at any time the unit is unable to produce the exact concentration selected, you will be notified with the above menu accompanied by the audible beep (single beep for low PPM. Double beep for high PPM.)

At any time during operation, pressing the select switch will result in the following series of menus

**100 PPM NH3
Select to change**

**Battery Status
100**

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

10 to 500 PPM
Set ... 100PPM

At this point pressing the up or down arrows will result in the output changing accordingly. Pressing the down arrow will scroll the output down from 500 PPM to 10 PPM. When the desired concentration is **displayed simply release the buttons. The unit will 'time out'** and return to normal operation displaying the source life and battery status before returning to display the new concentration. You are ready to calibrate.

20 PPM NH3
Select to change

When your calibration is complete simply press and hold the power button for approx. 5 seconds to turn the instrument off.

Remove vial

NH3
0035. PPM

Purging...

NH3
0035. PPM

The above screens will alternate until the PPM level purges below 10 PPM or until 30 seconds have expired before powering down. The coarse adjust should be fully closed at this time. It is recommended that the vial be removed and discarded before turning the unit off at the end of the day. Leaving the coarse adjust open with a vial in the unit will result in a gas build up in the system that can potentially damage the instrument.

Menu Options: Foreign Language Option

See page 4.

Gas Sources

OCV, Ammonia (NH3), 12 pack

525-0001-12

QCV, Ammonia (NH ₃), 12 Pack HIGH PPM	525-0011-12
---	-------------

Accessories and Replacement Parts

Item Description	Part Number
EC Module for GENie System	750-0202-01
O3 Module for GENie System	750-0202-02

See page 28 for more Accessories and Replacement Parts.

Specifications

Airflow rate	Variable
Useful source life	8 hours/vial (12 pack included)
Warm-up time	< 30 seconds
L x W x H	5"W x 3.88"H x 3.13"D
Weight	2 lb. (907 g)
Operating Temperature	0°C to 50°C
Relative Humidity	0 -100%
Accuracy	+/-10%
Repeat-ability	+/-5%
Battery Power	4 Alkaline AA
Battery Life	Approx. 5 hours

GENie EC Module

Fast warm-up time allows the instrument to be turned off between remotely located sensors saving battery life and avoiding the generation of unwanted gas. The GENie EC module uses the following components to produce the calibration gas/air mixture:

Internal Micro Pump

A small, rotary vane, micro air pump draws in ambient air to blend with the generated gas.

Operation

To start the instrument, press and hold the POWER switch, located in the lower right of the front of the instrument, until the display reads GENie EC, approximately five (5) seconds. Release the switch immediately thereafter.

The instrument will sequence through several screens as follows:

GENie 1.20 EC
Copyright 2012

The instrument will display the serial number and source number, followed by the manufactured date. The calibration date is the date the instrument (main module) was last calibrated.

Serial# 0000001
Source# 000001

Manufactured
01 Jan 2012

Calibration Date
01 Jan 2012

Initializing ...

Stabilizing ...

The unit will then scroll through the flow rate, concentration and gas type, source life, and battery status.

**Flow 0.5 LPM
Select to change**

1.00 PPM CL2

Source Life

Battery Status

Note that the gas type will be different depending on the source used as will the source life and concentration ranges.

At this point, the unit will begin the stabilizing period. The unit will display the following sequence until either the SELECT button is pressed to change the flow or concentration, the POWER button is pressed and held to turn the unit off, or the Standby time elapses.

**Stabilizing ...
Standby:60 sec**

Flow 0.5 LPM

**1.00 PPM CL2
Standby:60 sec**

When the Standby time elapses, the display will change to simply display the concentration as shown below. At this point the calibration gas is stable and you may proceed with calibration. A timer will run on the bottom-line indication the time the unit has been running.

1.00 PPM CL2

At any time during operation, pressing the select switch will result in the following series of menus.

**Flow 0.5 LPM
Select to change**

**1.00 PPM CL2
Select to change**

Source Life

Battery Status

When the flow is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

0.2 to 1.0 LPM

At this point pressing the up or down arrows will result in the flow rate changing accordingly. Pressing the down arrow will scroll the flow down from the current setting to 0.2 LPM.

Holding the down arrow will also allow the unit to be set to 0.0 LPM. When set to 0.0 LPM the unit will turn off the internal pump. This is done to provide a method for calibrating 'sample draw' instruments. In this configuration, the GENie EC operates similarly to a 'demand flow' type regulator. It should be noted that by setting both the flow and the concentration to zero the unit will operate as a real-time mass flow meter. To learn more about this 'sample draw' operation, refer to the 'sample draw' section IV.

When the desired flow rate is displayed simply release the buttons. The unit will 'time out' and scroll to the next menu in the sequence.

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display. (note that the range may differ depending on the source being used and the flow rate.)

0.5 to 50 PPM

At this point pressing the up or down arrows changes the output accordingly. Pressing the down arrow will scroll the output down from the current setpoint to 0.5 PPM. (note that the range may differ depending on the source being used.)

When the desired concentration is displayed simply release the buttons. The unit will 'time out' and return to normal operation displaying the source life and battery status. If either the flow rate, concentration, or both, are changed the unit will display a short 20-second stabilizing screen as shown below.

**Stabilizing ...
Standby: 20 sec**

Flow 0.5 LPM

**1.00 PPM CL2
Standby: 18 sec**

When the stabilizing time is complete, the unit will return to display the new concentration and flow rate. You are ready to calibrate.

1.0 PPM CL2

When your calibration is complete simply press and hold the power button for approx. 5 seconds to turn the instrument off. The display will indicate "Hold for power" until the 5 seconds is complete then, change to 'Purging...'. The unit will display the following screen and count down until the unit will power off. Note: At any time while purging the unit will allow for changing flow and PPM. By changing these variables, the unit

will return to normal running mode and the purge cycle will be aborted. The purge cycle is intended to allow the corrosive gases to be vented out of the instrument before storage. If the generating source is removed during the purge cycle, the unit will immediately power off. This allows for quick change out from one gas source to the next, for customers calibrating detection systems for multiple gases.

Purging ...
Standby: 180 sec

Menu Options: Sample Draw Mode

When set to 0.0 LPM the unit will turn off the internal pump. This is done to provide a method for calibrating 'sample draw' instruments. In this configuration, the GENie EC operates similarly to a 'demand flow' type regulator.

The display will change to the following.

Stabilize flow ...
Flow 0.000 LPM

The unit can now be connected to a sample draw instrument. Do this by connecting the hose from the sample draw instrument to the output of the GENie EC. The GENie will display the flow being pulled through the instrument and wait a short period to ensure the flow is stable. The display will look something like this.

Stabilize flow ...
Flow 0.65 LPM

With the flow stabilized, the unit will scroll to allow for setting the concentration. Note that the concentration range will differ based on the flow rate that the sample draw instrument pulls. At this point, the concentration can be set as described earlier.

0.5 to 50 PPM

Stabilizing ... Standby: 20 sec
--

Calibration gas will begin to flow immediately. The 20 second period is to allow for stabilization of the source and the sensor etc. It should be noted **that the concentration will be 'remembered' by the instrument when** the sample draw is removed. That is to say that several handheld instruments can be calibrated in this way without any user required interaction of the GENie EC instrument. (assuming all are being calibrated at the same concentration)

To achieve this, simply calibrate the first unit then remove it from the GENie EC. The unit will display the 0 flow and will wait patiently. When the next sample draw instrument is connected the unit will display its flow (they are often slightly different from unit to unit) and will immediately begin producing the concentration set earlier. In this way, the GENie EC calibration source can be used to calibrate several sample draw instruments quickly and easily.

The operator can also configure the instrument as a real-time mass flow meter by setting the concentration to zero. In this configuration, the GENie can be used to test sampling pumps. The flow source can be pushed through the input fitting (in place of the charcoal filter) or be drawn out through the output fitting. While the concentration is set to zero, the unit will simply display flow in real-time. To exit this mode simply select to change either the flow or the concentration away from zero as required.

Menu Options: Foreign Language Option

See page 4.

Gas Sources

Item Description	Capacity (Hrs.)	PPM Range Adjustable	Part Number
Cl2 (chlorine) micro	10 hr.	.05-5	510-0200-15
Cl2 (chlorine) micro	50 hr.	.05-5	510-0200-05
Cl2 (chlorine) double life micro	100 hr.	.05-5	510-0200-25
Cl2 (chlorine)	10 hr.	.5-50	510-0200-10
Cl2 (chlorine)	50 hr.	.5-50	510-0200-00
Cl2 (chlorine) double life	100 hr.	.5-50	510-0200-20
ClO2 (chlorine dioxide)	10 hr.	.5-5	510-0206-10
ClO2 (chlorine dioxide)	50 hr.	.5-5	510-0206-00
ClO2 (chlorine dioxide) double life	100 hr.	.5-5	510-0206-05
H2 (hydrogen)	10 hr.	.5-50	510-0209-10
H2 (hydrogen)	50 hr.	.5-50	510-0209-00
H2 (hydrogen) double life	100 hr.	.5-50	510-0209-20
H2 (hydrogen) high output	100 hr.	50-500	510-0201-09
H2S (hydrogen sulfide) micro	10 hr.	.05-5	510-0205-15
H2S (hydrogen sulfide) micro	50 hr.	.05-5	510-0205-05
H2S (hydrogen sulfide) double life micro	100 hr.	.05-5	510-0205-25
H2S (hydrogen sulfide)	10 hr.	.5-50	510-0205-10
H2S (hydrogen sulfide)	50 hr.	.5-50	510-0205-00
H2S (hydrogen sulfide) double life	100 hr.	.5-50	510-0205-20
HCN (hydrogen cyanide) micro	10 hr.	.05-5	510-0207-15
HCN (hydrogen cyanide) micro	50 hr.	.05-5	510-0207-05
HCN (hydrogen cyanide) double life micro	100 hr.	.05-5	510-0207-25
HCN (hydrogen cyanide)	10 hr.	.5-50	510-0207-10
HCN (hydrogen cyanide)	50 hr.	.5-50	510-0207-00
HCN (hydrogen cyanide) double life	100 hr.	.5-50	510-0207-20
NO2 (nitrogen dioxide) micro	50 hr.	.05-5	510-0202-05
NO2 (nitrogen dioxide) micro	10 hr.	.05-5	510-0202-15

Accessories and Replacement Parts

Item Description	Part Number
QC-1 Module for GENie System	750-0202-03
O3 Module for GENie System	750-0202-02

See page 28 for additional Accessories and Replacement Parts.

Specifications

Airflow rate (with internal pump)	0.2 to 1 LPM
Sample draw rate (with pump disabled)	0.1 to 1.2 LPM
Source life	10, 50 or 100 hours / source
Warm-up time (to 90%)	Approx. 2 minutes
L x W x H	5'W x 3.88'H x 3.13'D
Weight	2 lb. (1360 g)
Operating temperature	0° C to 50° C
Relative humidity (intermittent use)	0 - 100%
Accuracy	±10%
Repeat-ability	±5%
Batter power	4 Alkaline 'AA'
Battery life	8 hours (at .5 LPM flow rate)

Generating Source Removal and Replacement

Removal of the source is accomplished by slightly pulling down on the base plate to release the latching mechanism and sliding the base plate in the direction of the arrows as shown below. Push the source “Eject”

button (see arrow) to disengage the source. The source can now be removed.



Install the new source by aligning the source contacts and pressing the source in until it stops. Slide the base plate in the opposite direction of the arrows until it snaps in place.



GENie O3 Module

Fast warm-up time allows the instrument to be turned off between remotely located sensors saving battery life and avoiding the generation of unwanted gas. The GENie O3 module uses the following components to produce the calibration gas/air mixture:

Internal Micro Pump

A small, rotary vane, micro air pump draws in ambient air to blend with the generated gas.

Ultraviolet Light Source

The ultraviolet light source is calibrated at the factory. A precise concentration of gas is produced when a known amount of current and a known amount of air is supplied continuously to the source. Each source has a built-in memory chip that tells the main GENie instrument what type and range of gas can be generated and how much source life is remaining. This source should be calibrated at the factory annually or at 100 hours of operation whichever comes first. The estimated life of the source is 500 hours of operation.

Operation

To start the instrument, press and hold the POWER switch, located in the lower right of the front of the instrument, until the display reads GENie O3, approximately five (5) seconds. Release the switch immediately thereafter.

The instrument will sequence through several screens as follows:

<p>GENie 1.2 O3 Copyright 2012</p>
--

The instrument will display the serial number and source number, followed by the manufactured date. The calibration date is the date the instrument was last calibrated.

Serial# 000001
Source# 000001

Manufactured
01 Jan 2012

Calibration Date
01 Jan 2012

Initializing...

Stabilizing...

Standby:60 sec

The unit will then scroll through the concentration source life and battery status.

1.00 PPM O3
Select to change

Source Life
100 Hrs. 0min

Battery Status
100

At this point, the unit will begin the stabilizing period. The unit will display the following sequence until either the SELECT button is pressed to change the concentration, The POWER button is pressed and held to turn the unit off, or the Standby time elapses.

Stabilizing...
Standby:60sec

1.00 PPM O3
Standby:60 sec

When the Standby time elapses, the display will change to simply display the concentration as shown below. At this point the calibration gas is stable and you may proceed with calibration.

1.00 PPM O3
Select to change

At any time during operation, pressing the select switch will result in the following series of menus.

Source Life
100 Hrs.0min

Battery Status
100

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

.20 to 1.00 PPM
Set...1.00 PPM

At this point pressing the up or down arrows will result in the output changing accordingly. Pressing the down arrow will scroll the output down from 1.00 PPM to .20 PPM. When the desired concentration is displayed simply release the buttons. The unit will 'time out' and return to normal operation displaying the source life and battery status before returning to display the new concentration. You are ready to calibrate.

.20 PPM O3
Select to change

When your calibration is complete, simply press and hold the power button for approx. 5 seconds to turn the instrument off. The display will briefly change to 'Purging...' then the unit will power off.

Menu Options: Foreign Language Option

See page 4.

Accessories

Item Description	Part Number
QC-1 Module for GENie System	750-0202-03
EC Module for GENie System	750-0202-01

See page 28 for additional Accessories and Replacement Parts.

Specifications

Ozone (O3)	Variable	0.2 to 1.0 PPM
	Fixed 0.5 LPM	0.2 to 1.6 PPM (0.1 PPM increments)
	Fixed 1.0 LPM	0.2 to 0.8 PPM (0.1 PPM increments)
Airflow rate (with internal pump)	±5% dependent on the concentration	
Source life	500 hours	
Warm-up time (to 90%)	Approx. 2 minutes	
L x W x H	5"W x 3.88"H x 3.13"D	
Weight	2 lb. (1360 g)	
Operating temperature	0° C to 50° C	
Relative humidity (intermittent use)	0 - 80%	
Accuracy	±10%	
Repeat-ability	±5%	
Battery power	4 Alkaline 'AA'	
Battery life	5 hours (@ .5 PPM)	

Maintenance

If the instrument is returned on an annual basis to maintain NIST certification, the charcoal filter will be replaced by the factory.

Battery Replacement

To access the GENie battery compartment, the base module must be separated from the source module. This is accomplished by slightly pulling down on the base plate to release the latching mechanism and sliding the base plate in the direction of the arrows as shown below.



With the base plate out of the way, it is now possible to disengage the source module. This is accomplished by sliding the source module downward (relative to the base unit) as shown.



The source module is now disengaged from the base module and can be pulled away revealing the battery compartment.



To re-install the source module onto the base module, take the following steps: Align the air inlet fitting and the locking pins into

the eyelet holes as shown. Press the two units together and slide the source module upwards (relative to the base module) to lock it in place. The two units should be flush and tightly secured at this point, then simply slide the base plate back into position until it latches.



Troubleshooting

No Power to Instrument

Ensure that the POWER switch is pressed for five (5) seconds minimum. The most common failure mode is that the batteries are dead. Try replacing the batteries with new alkaline batteries or try powering the unit from the AC power adaptor or battery extender (if available).

If the unit is being operated from the external battery extender, make sure that the power switch on the battery extender is in the 'ON' position.

'Flow too low' / 'Flow too high' accompanied by an audible beep. GENie EC, GENie O3:

accompanied by an audible beep. Accurate airflow is critical to an accurate gas mixture.

The microprocessor and built-in precision mass flow sensor continuously monitor the airflow. If, however, a flow problem develops (e.g. air blockage or kinked tubing) which cannot be corrected within ten seconds, **the unit will display 'Flow too low.'** If the problem cannot be cleared after an additional minute, the instrument will enter the purge mode and then power down.

Sample draw instruments can only be calibrated utilizing the GENie O3 by filling a gas bag and drawing the calibration gas from the bag. It may also be possible to **calibrate a sample draw instrument by inserting a 'T' type fitting** between the GENie O3 and the unit to be tested. This will however require that the sample draw rate of the instrument under test be lower than that of the GENie. It should be noted that the maximum flow rate of the GENie O3 is produced at

.2PPM and is 1.0 LPM.

'Low PPM / High PPM warning' accompanied by an audible beep.

The unit will produce this warning whenever the selected

Concentration is unobtainable through the instruments control. Simply open or close the vial adjust knob to correct. If the vial is nearly expired, the vial may need to be replaced with a fresh vial to obtain higher concentrations.

Sample draw instruments can be calibrated utilizing the GENie QC-1 by filling a gas bag and drawing the calibration gas from the bag.

‘No Source Found!’ accompanied by an audible beep.

If the source is not initially detected by the processor, the unit will display **‘No Source Found’ and immediately shut down. This failure can happen** because a connection to the source is not made, or due to a failure of the circuit board on the generating source. Remove the source. Ensure that the electrical contacts are clean, then re-attach the source.

‘Source Cal Req’d’ accompanied by an audible beep.

GENie O3: The source calibration life has expired, and the display will show **‘Source Cal Req’d’**. **Return the instrument to ACD for calibration. (Note that the unit will still function normally despite calibration frequency being exceeded.)**








GENie QC-1: The calibration of the QC-1 is mated to the main module. You will see a sticker on the QC-1 indicating **“to be used with main module SN G-00xxxx”** **Connecting the QC-1** to a different main module will produce this display. In this case, the unit will turn itself off rather than generate inaccurate calibration gas. Once you connect the QC-1 to the correct main module, the error will go away.

The other potential source of the ‘source Cal Req’d’ display is simply indicating that the QC-1 has generated over 100 hours of calibration gas and source calibration is required. In this case, the unit will continue to operate normally. The message is simply a reminder.





‘Battery is low!’ accompanied by an audible beep.

Replace the batteries or switch to AC power.

Accessories

Item Description		EC	QC-1	O3	Part Number
GENie EC Module			X	X	750-0202-01
GENie QC-1 Module		X		X	750-0202-03
GENie O3 Module		X	X		750-0202-02
Hard Body Case		X	X	X	730-0615-00
Continuous Operation Adapter (specify a country when ordering)		X	X	X	362-0000-00
External Battery Extender (does not include batteries)		X	X	X	362-0010-00
Tool, ACD Magnetic Tip Screwdriver		X	X	X	243-0101-00

Replacement Parts

Item Description		EC	QC-1	O3	Part Number
Hose, with quick connect, 5'		X	X	X	715-0405-0X
External Charcoal Filter Assembly, GENie series		X	X	X	150-0120-00
Hose connector, insert (hose barb) quick connect		X	X	X	113-0402-00
Outlet fitting, body (1/8 NPT) quick connect		X	X	X	113-0400-00

Standard Warranty

ACD will warrant gas calibration equipment manufactured and sold by us to be free from defects in materials, workmanship, and performance one year from date of shipment. Any parts found defective within that period will be repaired or replaced, at our option, free of charge, F.O.B. factory. This warranty does not apply

to those items which by their nature are subject to deterioration or consumption in normal service, and which must be cleaned, repaired, or replaced on a routine basis.

Warranty is voided by abuse including rough handling, mechanical damage, alteration, or repair procedures not following the instruction manual. This warranty indicates the full extent of our liability, and ACD is not responsible for removal or replacement cost, local repair costs, transportation costs, or contingent expenses incurred without our prior approval.

ACD, Inc.'s obligation under this warranty shall be limited to repairing or replacing, and returning any product which shall be returned to ACD, Inc. at its manufacturing facilities, with transportation charges

prepaid, and which ACD, Inc.'s Material Review Board examination shall disclose to its satisfaction to have been defective.

This warranty is expressed in lieu of any and all other warranties and representations, expressed or implied, and all other obligations or liabilities on the part of ACD, Inc. including, but not limited to, the warranty of fitness for a particular purpose. In no event shall ACD, Inc. be liable for direct, incidental, or consequential loss or damage of any kind connected with the use of its products or failure of its products to function or operate properly.

Manufactured by:

Advanced Calibration Designs, Inc.

2024 W. McMillan Street Tucson, Arizona 85705 USA

Phone: 520 290 2855 . Fax: 520 290 2860

Int'l Phone: 001 520 290 2855 . Int'l Fax: 001 520 290 2860

Email: ACD@goacd.com website: www.GoACD.com

910-0202-0X Software Rev 1.16



**2024 W. McMillan St.
Tucson, Arizona 85705 USA
Telephone: (520) 290-2855
Fax: (520) 290-2860
Toll Free: (800) 737-0223
Email: acd@goACD.com
Web: www.goACD.com**

Software Rev 1.16

Mass Flow Sensor

The GENie main module has a built-in mass flow sensor that measures the flow rate of the instrument. This information is used in two ways. With the pump engaged, it is used to control the pump to the desired flow rate over a range of 0.2 to 1.0 LPM. With the pump disabled, it is used to measure the airflow rate drawn through the GENie by an external pump (for use with EC module only). This information is used to determine the source generation rate to achieve the desired ppm. The flow meter should be calibrated against a primary mass flow standard every 12 months.

System Interface Bus

The center of the GENie system of products is the module expansion bus. This proprietary interface bus is what allows the GENie base unit to interface with an ever-expanding family of product modules. Each source module provides the base unit with information about calibration, the life of the unit, gas type, etc. These contacts must remain clean and undamaged throughout the life of the instrument. If communication between the modules is ever corrupted, the unit will display the 'source not found' error and turn itself off.

Foreign Language Option

The menu options can be adjusted to read in German, French, or Spanish. To change the language, start the unit as you normally would. When the GENie screen appears,

GENie [Module Name]

press the SELECT button. This will bring up the following screen (note: the Select button must be pressed quickly before the above screen transitions):

English

Press the SELECT button to choose the preferred language. Each time the select button is pressed the language will continue to scroll through the four possible options. When the language is displayed, press the POWER button to continue with the start-up sequence.

GENie QC-1 Module

Operation

Quick Check Vial (QCV)

The GENie QC-1 utilizes the ACD Quick Check Vials (QCVs) as a gas source. Before inserting a new vial into the instrument, open the coarse adjust knob approximately three rotations to allow for easier insertion. To begin operation, take one of the QC vials and break the internal glass vial to release the gas. Slide open the GENie base unit and insert the vial into the unit as shown below. The vial should snap into place. Then return the base plate by sliding it back until it 'latches' into place.



To start the instrument, press and hold the POWER switch, located in the lower right of the front of the instrument, until the display reads GENie QC-1, approximately five (5) seconds. Release the switch immediately thereafter.

The instrument will sequence through several screens as follows:

GENie 1.2 QC-1
Copyright 2012

The instrument will display the serial number and source number, followed by the manufactured date. The calibration date is the date the instrument was last calibrated.

Serial# 0000001
Source# 000001

Manufactured
01 Jan 2012

When the coarse adjust in range the unit will return to displaying the set point concentration.

If the Low PPM warning message is present open the vial adjust slightly by rotating it counterclockwise to allow additional gas to enter the system. If the High PPM warning message is present close the vial adjust knob by rotating it clockwise as shown in the image to the right.



When the instrument has stabilized, the display will change to read the concentration of the gas being generated and the flow rate as shown below.

**100 PPM NH3
@ .50**

The position of the vial adjust is a rough adjustment depending on the concentration you have selected. The instrument will adjust flow to obtain the exact concentration. In general, a more open vial adjust will result in a higher flow rate and a more closed vial adjust will result in a lower flow rate. If at any time the unit is unable to produce the exact concentration selected, you will be notified with the above menu accompanied by the audible beep (single beep for low PPM. Double beep for high PPM.)

At any time during operation, pressing the select switch will result in the following series of menus

**100 PPM NH3
Select to change**

**Battery Status
100**

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

10 to 500 PPM
Set ... 100PPM

At this point pressing the up or down arrows will result in the output changing accordingly. Pressing the down arrow will scroll the output down from 500 PPM to 10 PPM. When the desired concentration is displayed simply release the buttons. The unit will 'time out' and return to normal operation displaying the source life and battery status before returning to display the new concentration. You are ready to calibrate.

20 PPM NH3
Select to change

When your calibration is complete simply press and hold the power button for approx. 5 seconds to turn the instrument off.

Remove vial

NH3
0035. PPM

Purging...

NH3
0035. PPM

The above screens will alternate until the PPM level purges below 10 PPM or until 30 seconds have expired before powering down. The coarse adjust should be fully closed at this time. It is recommended that the vial be removed and discarded before turning the unit off at the end of the day. Leaving the coarse adjust open with a vial in the unit will result in a gas build up in the system that can potentially damage the instrument.

Menu Options: Foreign Language Option

See page 4.

Gas Sources

QCV, Ammonia (NH3), 12 pack

525-0001-12

1.00 PPM CL2

At any time during operation, pressing the select switch will result in the following series of menus.

**Flow 0.5 LPM
Select to change**

**1.00 PPM CL2
Select to change**

Source Life

Battery Status

When the flow is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

0.2 to 1.0 LPM

At this point pressing the up or down arrows will result in the flow rate changing accordingly. Pressing the down arrow will scroll the flow down from the current setting to 0.2 LPM.

Holding the down arrow will also allow the unit to be set to 0.0 LPM. When set to 0.0 LPM the unit will turn off the internal pump. This is done to provide a method for calibrating 'sample draw' instruments. In this configuration, the GENie EC operates similarly to a 'demand flow' type regulator. It should be noted that by setting both the flow and the concentration to zero the unit will operate as a real-time mass flow meter. To learn more about this 'sample draw' operation, refer to the 'sample draw' section IV.

When the desired flow rate is displayed simply release the buttons. The unit will 'time out' and scroll to the next menu in the sequence.

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display. (note that the range may differ depending on the source being used and the flow rate.)

0.5 to 50 PPM

At this point pressing the up or down arrows changes the output accordingly. Pressing the down arrow will scroll the output down from the current setpoint to 0.5 PPM. (note that the range may differ depending on the source being used.)

When the desired concentration is displayed simply release the buttons. The unit will 'time out' and return to normal operation displaying the source life and battery status. If either the flow rate, concentration, or both, are changed the unit will display a short 20-second stabilizing screen as shown below.

**Stabilizing ...
Standby: 20 sec**

Flow 0.5 LPM

**1.00 PPM CL2
Standby: 18 sec**

When the stabilizing time is complete, the unit will return to display the new concentration and flow rate. You are ready to calibrate.

1.0 PPM CL2

When your calibration is complete simply press and hold the power button for approx. 5 seconds to turn the instrument off. The display will indicate "Hold for power" until the 5 seconds is complete then, change to 'Purging...'. The unit will display the following screen and count down until the unit will power off. Note: At any time while purging the unit will allow for changing flow and PPM. By changing these variables, the unit

will return to normal running mode and the purge cycle will be aborted. The purge cycle is intended to allow the corrosive gases to be vented out of the instrument before storage. If the generating source is removed during the purge cycle, the unit will immediately power off. This allows for quick change out from one gas source to the next, for customers calibrating detection systems for multiple gases.

Purging ...
Standby: 180 sec

Menu Options: Sample Draw Mode

When set to 0.0 LPM the unit will turn off the internal pump. This is done to provide a method for calibrating 'sample draw' instruments. In this configuration, the GENie EC operates similarly to a 'demand flow' type regulator.

The display will change to the following.

Stabilize flow ...
Flow 0.000 LPM

The unit can now be connected to a sample draw instrument. Do this by connecting the hose from the sample draw instrument to the output of the GENie EC. The GENie will display the flow being pulled through the instrument and wait a short period to ensure the flow is stable. The display will look something like this.

Stabilize flow ...
Flow 0.65 LPM

With the flow stabilized, the unit will scroll to allow for setting the concentration. Note that the concentration range will differ based on the flow rate that the sample draw instrument pulls. At this point, the concentration can be set as described earlier.

0.5 to 50 PPM

Stabilizing ... Standby: 20 sec
--

Calibration gas will begin to flow immediately. The 20 second period is to allow for stabilization of the source and the sensor etc. It should be noted that the concentration will be 'remembered' by the instrument when the sample draw is removed. That is to say that several handheld instruments can be calibrated in this way without any user required interaction of the GENie EC instrument. (assuming all are being calibrated at the same concentration)

To achieve this, simply calibrate the first unit then remove it from the GENie EC. The unit will display the 0 flow and will wait patiently. When the next sample draw instrument is connected the unit will display its flow (they are often slightly different from unit to unit) and will immediately begin producing the concentration set earlier. In this way, the GENie EC calibration source can be used to calibrate several sample draw instruments quickly and easily.

The operator can also configure the instrument as a real-time mass flow meter by setting the concentration to zero. In this configuration, the GENie can be used to test sampling pumps. The flow source can be pushed through the input fitting (in place of the charcoal filter) or be drawn out through the output fitting. While the concentration is set to zero, the unit will simply display flow in real-time. To exit this mode simply select to change either the flow or the concentration away from zero as required.

Menu Options: Foreign Language Option

See page 4.

Accessories and Replacement Parts

Item Description	Part Number
QC-1 Module for GENie System	750-0202-03
O3 Module for GENie System	750-0202-02

See page 28 for additional Accessories and Replacement Parts.

Specifications

Airflow rate (with internal pump)	0.2 to 1 LPM
Sample draw rate (with pump disabled)	0.1 to 1.2 LPM
Source life	10, 50 or 100 hours / source
Warm-up time (to 90%)	Approx. 2 minutes
L x W x H	5'W x 3.88'H x 3.13'D
Weight	2 lb. (1360 g)
Operating temperature	0° C to 50° C
Relative humidity (intermittent use)	0 - 100%
Accuracy	±10%
Repeat-ability	±5%
Batter power	4 Alkaline 'AA'
Battery life	8 hours (at .5 LPM flow rate)

Generating Source Removal and Replacement

Removal of the source is accomplished by slightly pulling down on the base plate to release the latching mechanism and sliding the base plate in the direction of the arrows as shown below. Push the source **“Eject”**

1.00 PPM O3
Standby:60 sec

When the Standby time elapses, the display will change to simply display the concentration as shown below. At this point the calibration gas is stable and you may proceed with calibration.

1.00 PPM O3
Select to change

At any time during operation, pressing the select switch will result in the following series of menus.

Source Life
100 Hrs.0min

Battery Status
100

When the concentration is displayed with the 'Select to change' indication, pressing the select button will result in the following display.

.20 to 1.00 PPM
Set...1.00 PPM

At this point pressing the up or down arrows will result in the output changing accordingly. Pressing the down arrow will scroll the output down from 1.00 PPM to .20 PPM. When the desired concentration is displayed simply release the buttons. The unit will 'time out' and return to normal operation displaying the source life and battery status before returning to display the new concentration. You are ready to calibrate.

.20 PPM O3
Select to change

When your calibration is complete, simply press and hold the power button for approx. 5 seconds to turn the instrument off. The display will briefly change to 'Purging...' then the unit will power off.

Troubleshooting

No Power to Instrument

Ensure that the POWER switch is pressed for five (5) seconds minimum. The most common failure mode is that the batteries are dead. Try replacing the batteries with new alkaline batteries or try powering the unit from the AC power adaptor or battery extender (if available).

If the unit is being operated from the external battery extender, make sure that the power switch on the battery extender is in the 'ON' position.

'Flow too low' / 'Flow too high' accompanied by an audible beep.
GENie EC, GENie O3:

accompanied by an audible beep. Accurate airflow is critical to an accurate gas mixture.

The microprocessor and built-in precision mass flow sensor continuously monitor the airflow. If, however, a flow problem develops (e.g. air blockage or kinked tubing) which cannot be corrected within ten seconds, the unit will display 'Flow too low.' If the problem cannot be cleared after an additional minute, the instrument will enter the purge mode and then power down.

Sample draw instruments can only be calibrated utilizing the GENie O3 by filling a gas bag and drawing the calibration gas from the bag. It may also be possible to calibrate a sample draw instrument by inserting a 'T' type fitting between the GENie O3 and the unit to be tested. This will however require that the sample draw rate of the instrument under test be lower than that of the GENie. It should be noted that the maximum flow rate of the GENie O3 is produced at

.2PPM and is 1.0 LPM.

'Low PPM / High PPM warning' accompanied by an audible beep.

The unit will produce this warning whenever the selected

Concentration is unobtainable through the instruments control. Simply open or close the vial adjust knob to correct. If the vial is nearly expired, the vial may need to be replaced with a fresh vial to obtain higher concentrations.

Sample draw instruments can be calibrated utilizing the GENie QC-1 by filling a gas bag and drawing the calibration gas from the bag.

‘No Source Found!’ accompanied by an audible beep.

If the source is not initially detected by the processor, the unit will display ‘No Source Found’ and immediately shut down. This failure can happen because a connection to the source is not made, or due to a failure of the circuit board on the generating source. Remove the source. Ensure that the electrical contacts are clean, then re-attach the source.

‘Source Cal Req’d’ accompanied by an audible beep.

GENie O3: The source calibration life has expired, and the display will show ‘Source Cal Req’d’. Return the instrument to ACD for calibration. (Note that the unit will still function normally despite calibration frequency being exceeded.)








GENie QC-1: The calibration of the QC-1 is mated to the main module. You will see a sticker on the QC-1 indicating “to be used with main module SN G-00xxxx” Connecting the QC-1 to a different main module will produce this display. In this case, the unit will turn itself off rather than generate inaccurate calibration gas. Once you connect the QC-1 to the correct main module, the error will go away.

The other potential source of the ‘source Cal Req’d’ display is simply indicating that the QC-1 has generated over 100 hours of calibration gas and source calibration is required. In this case, the unit will continue to operate normally. The message is simply a reminder.

‘Battery is low!’ accompanied by an audible beep.

Replace the batteries or switch to AC power.

Accessories

Item Description		EC	QC-1	O3	Part Number
GENie EC Module			X	X	750-0202-01
GENie QC-1 Module		X		X	750-0202-03
GENie O3 Module		X	X		750-0202-02
Hard Body Case		X	X	X	730-0615-00
Continuous Operation Adapter (specify a country when ordering)		X	X	X	362-0000-00
External Battery Extender (does not include batteries)		X	X	X	362-0010-00
Tool, ACD Magnetic Tip Screwdriver		X	X	X	243-0101-00

Replacement Parts

Item Description		EC	QC-1	O3	Part Number
Hose, with quick connect, 5'		X	X	X	715-0405-0X
External Charcoal Filter Assembly, GENie series		X	X	X	150-0120-00
Hose connector, insert (hose barb) quick connect		X	X	X	113-0402-00
Outlet fitting, body (1/8 NPT) quick connect		X	X	X	113-0400-00

Standard Warranty

ACD will warrant gas calibration equipment manufactured and sold by us to be free from defects in materials, workmanship, and performance one year from date of shipment. Any parts found defective within that period will be repaired or replaced, at our option, free of charge, F.O.B. factory. This warranty does not apply

to those items which by their nature are subject to deterioration or consumption in normal service, and which must be cleaned, repaired, or replaced on a routine basis.

Warranty is voided by abuse including rough handling, mechanical damage, alteration, or repair procedures not following the instruction manual. This warranty indicates the full extent of our liability, and ACD is not responsible for removal or replacement cost, local repair costs, transportation costs, or contingent expenses incurred without our prior approval.

ACD, Inc.'s obligation under this warranty shall be limited to repairing or replacing, and returning any product which shall be returned to ACD, Inc. at its manufacturing facilities, with transportation charges

prepaid, and which ACD, Inc.'s Material Review Board examination shall disclose to its satisfaction to have been defective.

This warranty is expressed in lieu of any and all other warranties and representations, expressed or implied, and all other obligations or liabilities on the part of ACD, Inc. including, but not limited to, the warranty of fitness for a particular purpose. In no event shall ACD, Inc. be liable for direct, incidental, or consequential loss or damage of any kind connected with the use of its products or failure of its products to function or operate properly.

Manufactured by:

Advanced Calibration Designs, Inc.

2024 W. McMillan Street Tucson, Arizona 85705 USA

Phone: 520 290 2855 . Fax: 520 290 2860

Int'l Phone: 001 520 290 2855 . Int'l Fax: 001 520 290 2860

Email: ACD@goacd.com website: www.GoACD.com

910-0202-0X Software Rev 1.16